K84

User Manual

TABLE OF CONTENT

1. BASIC INFORMATION ----------5

1.1. BRIEF INTRODUCTION ----------5

1.2. ID ----------6

2. BEFORE USE ----------7

2.1. APPEARANCE SKETCH MAP ----------7

2.2. INSTALL SIM CARD AND MEMORY CARD ----------7

2.2.1. SIM CARD ----------7

2.2.2. MEMORY CARD ----------7

2.3. BATTERY ----------7

2.3.1. INSTALLING THE BATTERY ----------7

2.3.2. CHARGING ----------8

2.4. SECURITY PASSWORD ----------8

3. STANDBY INTERFACE ----------9

3.1. STANDBY INTERFACE 1 ----------9

3.2. STANDBY INTERFACE 2 ----------9

3.3. STANDBY INTERFACE 3 ----------9

3.4. STANDBY INTERFACE 4 ----------9

3.5. STANDBY INTERFACE 5 ----------9

3.6. STANDBY INTERFACE 6 ----------10

3.7. STANDBY INTERFACE 7 ----------10

3.8. POWER ON/OFF THE PHONE ----------10

3.9. T-FLASH CARD----------10
4. FUNCTION MENU----------10
4.1 CALENDAR----------10
4.2 MUSIC----------10
4.3 VIDEO----------10
4.4 TIMER----------11
4.5 KINGMOVIE----------11
4.6 CONTACTS----------11
4.7 CALL LOG----------11
4.8 DIALPAD----------12
4.9 SETTINGS----------12
4.10 LOCK SCREEN----------14
4.11 ANGRYBIRDS----------14
4.12 FRUIT----------14
4.13 FISHING----------14
4.14 INTERNET----------15
4.15 MESSAGE----------15
4.16 CAMERA----------16
4.17 VIDEO RECORDER----------17
4.18 PROFILES----------17
4.19 STOPWATCH----------17
4.20 EBOOK----------17
4.21 MY FILES----------17

4.22 BLUETOOTH---------- 18
4.23 IMAGE ---------- 18
4.24 FM RADIO ---------- 18
4.25 CALCULATOR ---------- 18
4.26 RECORDER---------- 18
4.27 WORLD CLOCK---------- 18
4.28 LOCAL SEARCH ---------- 19
4.29 CONVERSION---------- 19
4.30 BACKUP---------- 19
4.31 ALARM ---------- 19
4.32 STK---------- 19
4.33 MEMO---------- 19
4.34 FACEBOOK ---------- 19
4.35 KARBONN LIVE---------- 19
4.36 TEXTWEB---------- 19
4.37 KARBONN ZONE ---------- 19
4.38 CUSTOMER SERVICE MENUSYSTEM SWITCH ---------- 20
4.39 U MENU ---------- 20
5 CARE AND MAINTENANCE ---------- 20

1. Basic Information

1.1. Brief Introduction

Thanks for selecting K84 color screen GSM digital mobile phone. Through reading the manual, you can fully know how to use K84 mobile phone, appreciate its complete function and simple operating method.

K84 color screen mobile phone is designed aiming at GSM network environment; the phone is Two Card Two Standby, but you cannot call another SIM card when one SIM card is on call. Besides basic call functions of K84 also provides many kinds of practical functions, such as name card holder, scene mode, message, audio and video player, camera and video, E-book, game, BT, alarm clock, calculator,STK,time and date,auto power-on and shut-downetc., which will beconvenient for your work and leisure activities. In addition, K84 adopts personalized human-computer interface design. It`s complete function can meet your different requirements.

K84color screen mobile phone accords with GSM criterion, has obtained the certification of competent authority.

The company reserves the rights to revise the contents of the manual without prior notice.

1.2. ID

1 Power Key **2 Side Key**
3 Camera **4 Speaker** **5 Touch panle**

2. Before Use

2.1. Appearance Sketch Map

2.2. Install SIM Card and Memory Card

2.2.1. SIM Card

Before using the phone, you must insert valid SIM (Subscriber Identity Module) card in the phone. SIM card is provided by the network supplier.

When you subscribe to a cellular network, you will receive a plug-in SIM card complete with your subscription details, such as your PIN, and available optional services.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water or dirt.

Tips：Face the gold color contact point of SIM card towards the cell phone and push the SIM card into the slot.

2.2.2. Memory Card

Aim at the T card slot and push the T card gently, and the card will be inserted correctly.

Prompt: If the memory card is failed, please check whether it is correctly placed and good contact of metal point.

2.3. Battery

2.3.1. Installing the Battery

- Take off the rear cover of the mobile.
- Make one end of battery with metal surface aim at the battery connector.
- Then gently press the battery downward using the finger and press the other

end to install the battery.

Prompt: Please operate correctly to avoid damaging the battery connector.

2.3.2. Charging

Insert the charger; the flash symbol on the charger plug must face upwards.

Connect the charger to a standard wall outlet and the battery power icon in the up-right corner of the screen will start scrolling. When the battery bar stops scrolling, it means the battery charge is complete. Press the two sides of the charger plug and disconnect the charger from the phone.

Prompt: In order to ensure normal operation of the phone, please make sure to use the designated charger.

2.4. Security Password

- **PIN**

PIN (Personal Identification Number) is used to prevent your SIM card from being used illegally. Default PIN is 1122. The PIN is usually provided with the SIM card together. If you input the wrong PIN for continuously three times, please input PUK to unlock it. Please contact the network operations company for more details.

- **PIN 2**

You need to input PIN2 when entering some functions (such as call charge); if you input wrong PIN2 for continuous three times, you need to input PUK2 to unlock it. Please contact the network operations company for more details.

- PUK

When changing the locked PIN, you need to input PUK (Personal Unlock Key). PUK is provided with the SIM card together. If it is not provided, please contact your service provider. If you input the wrong PUK for continuously ten times, the SIM card will be considered as permanently invalid. In that case please contact your service provider to buy a new card. You can't change the PUK. If you lose the code, please contact your service provider for assistance.

■ **PUK2**

When changing the locked PIN2, you need to input PUK2. If you input the wrong PUK2 for continuously ten times, you can't use the functions that need PIN2. Please contact your service provider to buy a new card. You can't change the PUK 2. If you lose the code, please contact your service provider for assistance

3. Standby Interface

3.1. Standby Interface 1

The Phone screen 1display Airport, Bluetooth, backlight and Earphonr on/off. Touch screen for three seconds then you can add applications.

3.2. Standby Interface 2

The Phone screen 2th display FM Radio.

3.3. Standby Interface 3

The Phone screen 3rd display Secretary.

3.4. Standby Interface 4

The Phone screen 4th display Dialpad, Message, Contacts, My files, Audio, Internet, Camera and time.

3.5. Standby Interface 5

The Phone screen 5th display Alarm.

3.6. Standby Interface 6

The Phone screen 6th display Audio.

3.7. Standby Interface 7

The Phone screen 7th display Calendar.

3.8. Power on/off the Phone

In the standby mode, press and hold End key to power on/off the phone.

3.9. T-flash Card

Insert the T-Flash card into the phone from the background. This will expand the Flash memory of the phone.

From the Tap Multimedia menu you can browse MP3, MP4, picture, video, photograph etc.

4. Function Menu

4.1 Calendar

Access this menu, the calendar will be shown on the screen. Press the icon to change the date, and the calendar shown on the screen will be changed accordingly.

4.2 Music

Also it is called music player. Your **K84**comes with a music player to let you enjoy any music of your choice through your TF card. You can easily transfer your favorite music from your PC to the TF card and experience a whole world of interesting and melodious music.

4.3 Video

Access the menu, you can enter film list and press “options” to choose a movie clip to play, send, rename, delete, delete all files, view details. While playing, long press right or left key to adjust the rate of progress, by pressing up and down key to adjust volume, center key to play or pause.Avi,3gp and mp4 formats are supported.

4.4 Timer

Count the elapsed time using the timer.

4.5 KingMovie

If you want to use King Movie function, first in the memory card“KingMovie” folder into the video file you can use the menu. It only support .smv format.

4.6 Contacts

Through yourcontacts，you can access your existingcontacts as well as organize groups, access SIM related services and blacklist undesired numbers from calling you up.

The Contacts is organized into tabs for easy access and use.

You can access phone book from the main menu or by pressing the Contacts icon.

Your Contacts allows you to organize your contacts into groups for customizing call tunes and other preferences specific to those groups.

You can view the phonebook by Phone, SIM 1/SIM 2 memory and caller groups.

4.7 Call Log

■ Missed calls: Display the list of your recent missed numbers.
■ Received calls: Display the list of your recent answered numbers.
■ Dialed calls: Display the list of your recent dialed numbers.
■ Rejected calls: Display the incoming call records in the blacklist.

You can turn to Favorites, All and Dial.

4.8 Dialpad

By this function, you can dial the number you want. Press the Volume Up/ Down keys to adjust the call volume.

You can turn to Call logs, Contacts and Favorites.

4.9 Settings

■ Phone settings

——Time &date: You can set up the date and the time on the phone as well as in the display mode.

——Language settings: You can select phone language.

——Input method settings: You can select displayand input language.

——Auto Power on/off: You can set the time and repeat mode to power-on or power-off.

——Power saving mode: You can view the electric quantity of your battery.

——Browser selection: You can set browser selection.

——Restore factory settings: You can restore part of the phone settings as factory settings.The default code of restoring factory settings is: 1122.

■ Display

——Animation effect: You can set as defaultpower on/off animation or as well

as other animation.

——Wallpaper settings: You can set as default wallpaper images or as well as other wallpaper images.

——Screen saver settings: You can set as default images/animation or as well as other images/animation.

——Contrast: On the screen backlight interface you can set different brightness of your phone by pressing the left/right direction key.

——Backlight:You can set Backlight time.

——Keypadbacklight time

■ Security

——PIN: You can start up shut down or modify PIN code.
The default PIN code is 1122.

——ModifyPIN2: You can review PIN2 code. For details, please contact the network operator.

——Phone locked: You can start up or shut down “phone password” or revise it. The default phone password is 1122.

——Auto lock screen

——Fix dial number

■ Call Settings

——Dual-SIM

——Call divert: When “call divert” function is start up, you can transfer the incoming call to voice inbox or other phone number according to the task “ call divert” conditions.

——Call waiting: You can start up or shut down the function. When it is selected even when you are on a call, you can also receive another call.

——Call barred: All outgoing calls, incoming calls, roaming incoming calls, international outgoing calls, roaming international outgoing calls are available.

——Select line: There are two lines can be selected: line 1 and line 2. But the function is just for the phone which has one SIM card and two numbers. If you are not using that type of a phone please select line 1, because if you choose line 2, dialing will be limited.

——Reject call time: You can select the time to auto end the calling.

——Hide ID: This function must be supported by the network.

——Others

——Network selection

This function can let you select the network manually or automatically when the phone is in the roaming state. You can use this function only after you have made an effective roaming.

4.10 Lock Screen

You can choose your own style of lock screen.

4.11 AngryBirds

A game accompany you spend leisure time.

4.12 Fruit

A game accompany you spend leisure time.

4.13 Fishing

A game accompany you spend leisure time.

4.14 Internet

■ Internet

Internet is an application platform integrating wireless communication and Internet technology, which makes it possible for you to access to rich Internet information source and e-commerce application etc.

4.15 Message

■ Write Message

You could write new messages by using this function. When you input the message to be sent clickleft soft key to send, to insert the templates, to add contact person information and symbol, and to save etc.

■ Inbox

Store the SMS message you've received. The SMS message could be differentiated by different icons. Theiconsbefore the message list means whether this message is a SMS message and the place where it is stored. in SIM1, SIM2 or the in phone.

■ Outbox

Store the SMS you've sent but not gone(Pending/que). The SMS can be stored in SIM1, SIM2 or in the phone.

■ Drafts

Store the SMS you've edited. The SMS can bestored in SIM1, SIM2 orin the phone.

■ Sentbox

Store the SMS you've sent successfully. The SMS can be stored in SIM1, SIM2 orin the phone.

■ Templates

You could edit or delete the templates.

■ Broadcast message

The area info services send different kinds of messages. Change the settings of this service and inquire the area info by using this function.

■ Voice mail server

This phone supports the function of the voice mail. You could choose either SIM1 or SIM2. When you receive the calls from others, they could give you a message in your voice mailbox. When you phone receives the message notice, you could listen to the messages.Under the voice mail interface you can edit and set the number of line 1, line 2, fax or data.

■ Settings

There are seven options: SMS sign setting,SIM1 msg center, SIM2 msg center center, message validity period, status report, save sent messages, preferred storagemedium.

■ Delete all

Delete all messages in Inbox/Outbox/Drafts/Sent box.

■ Message capacity

You could view the capacity of the SMS and MMS.

4.16 Camera

The device is equipped with a webcam with high pixels. You can take a photo at any time and save the photo in the device or SIM card. The photo can be used as wallpaper of your device or you can send it to your friends through BT.

4.17 Video recorder

The device is equipped with a video capture so that you can chat with your friends through it. A driver is needed to be installed when the video capture function is used. The details can be found in driver installation guide.

4.18 Profiles

This phone provides several profiles, by touch, you can enter to set: Activate, Customize.

4.19 Stopwatch

Use the stopwatch to count time elapsed and also view previously recorded counts.

4.20 Ebook

Read txt format file. You can complete the following features: View, delete, delete all, scroll style, language code and information. While reading, press “Option” to do the work such as full screen, my bookmark, scroll style, language code.

4.21 My files

You can check the specific content and service condition of the phone memory via this function. Meanwhile, you can format the memory too.

4.22 Bluetooth

This mobile phone support Bluetooth wireless connection. You can establish wireless connection between mobile phone and device to realize voice communication, data exchange and synchronization.

4.23 Image

Enter the menu you can view the photos in phone memory or memory card. Press the left soft key can be: View, set as , send, rename, delete, delete all files, mark, slide show, view details. View pictures, the left soft key can be: set as contacts, wallpaper and screensaver, send, delete, can also see pictures of view details.

4.24 FM radio

You can listen as well as record your favorite FM channels using the inbuilt FM receiver of your phone.

You can record your channels inAMR formats. You can set various radio preferences from Options > Settings.

4.25 Calculator

Access this menu, the calculator will be shown on the screen. You can use the numbers and operators to calculate.

4.26 Recorder

Touch to start recording, press the right soft key to stop recording. Press the left soft key options are: play, new, delete, view files. All those files recorded are AMR and WAV format.

4.27 World clock

Enter World clock submenu, to set the time where you are.

4.28 Local search

You can quick search what you want. Like: Contacts, message and so on.

4.29 Conversion

Weight calculation and the distance of the unit conversion.

4.30 Backup

You can backup or restore your call logs, contacts, SMS and calendar.

4.31 Alarm

Set the alarm time and it will remind you by alert tone or vibration when the alarm time comes.

4.32 STK

Enter STK submenu, to use the additional services that the network service operator provide.

4.33 Memo

You can record what happened at any time.

4.34 Facebook

Your device is supported Facebook.

4.35 Karbonn live

Customerservice menu

4.36 Textweb

Your device is supported Textweb

4.37 Karbonn zone

4.38 Customerservice menuSystem Switch

You can set different system style as you like.

4.39 U menu

You can use the U menu

5 Care and Maintenance

Maintenance of battery

·Your device is powered by a rechargeable battery. It is necessary to have the battery charged before using. The full performance of a new battery is achieved only when it is fully wore out.

·Unplug the charger from the electrical plug and the device when not in use. Do not leave fully a charged battery connected to a charger over a week, since overcharging may shorten its lifetime.

·Temperature tends to affect the limit of battery to be charged. Therefore, it is necessary for the battery to be cooled or warmed before it is charged. If the temperature of batter exceeds 40ºC ,the battery cannot be charged.

·Use the battery only for its intended purpose and avoid short-circuiting. Accidental short-circuiting can occur when a metallic object causes direct connection of the positive(+) and negative(-) terminals of the battery.

·Do not use damaged battery.

·Leaving the battery in hot or cold places will reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily, even

when the battery is fully charged.

·Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations.

Care of maintenance of your device

The suggestions below will help you to protect your warranty coverage.

·Keep the device and accessories out of the reach of small children.

·Keep the device dry. All types of liquids or moisture will corrode electronic circuits.

·Do not store the device in hot areas. High temperatures can shorten the life of electronic devices and warp or melt certain plastics.

·Do not attempt to open the device other than as instructed in this guide. Non-professional handling may damage the device.

·Do not use harsh chemicals or strong detergents to clean the device.

·Use only the supplied or an approved replacement attachments, for the unauthorized ones could invalidate the warranty of maintenance.

Special note: To prevent possible hearing damage, do not listen at high volume levels of long periods.

To prevent possible hearing damage, do not listen at high volume levels of long periods.

YES NO

Press “YES” or “NO” to continue or stop .

- **The socket-outlet shall be installed near the equipment and shall be easily accessible.**

Correct Disposal of this product	
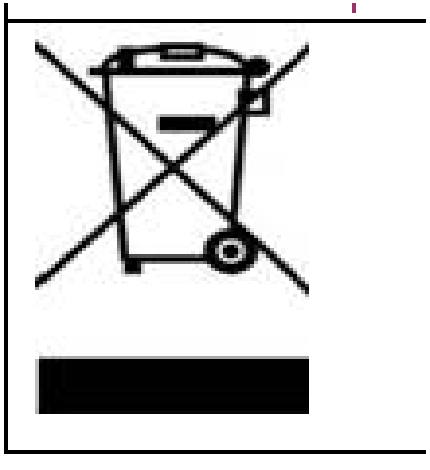	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

The plug portion of the AC/DC adaptor is used as disconnect device. Therefore, the appliance should be placed near the socket outlet and easily accessible

Photo for reference only

SAR Compliance

Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.

SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.

The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories or other accessories.

The highest SAR value of the device is 1.007 W/kg respectively averaged over 1 gm of human tissue.

ROHS Declaration

Declaration of Conformity with the requirements of the e-waste Management Rules, 2011 (adopted by Notification S.O.1035 (E) of Ministry of Environment and Forests)

The Product is in conformity with the requirements of Rule 13 of the e-waste Rules. The content of hazardous substance with the exemption of the applications listed in SCHEDULE II of the e-waste Rules:

1. Lead (Pb) – not over 0.1% by weight;
2. Cadmium (Cd) – not over 0.01% by weight;
3. Mercury (Hg) – not over 0.1% by weight;
4. Hexavalent chromium (Cr6+) – not over 0.1% by weight;
5. Polybrominated biphenyls (PBBs) – not over 0.1% by weight;
6. Polybrominated diphenyl ethers (PBDEs) – not over 0.1% by weight.